

SD078 - Class 37 Police Diesel

| F# | Spot Sound Description | Mode | | | | | | | | |
|-----|---|----------|-----------------------------|--------------------|-----------------------|---------------------|----------------------|--------|--------|--------|
| F0 | Headlight/Rear Lights | T | | | | | | | | |
| F1 | Sound Enable/Engine Start | T | | | | | | | | |
| F2 | Multiple Horns (4) | M | F2a_Low_High_Short | F2b_High_Low_Short | F2c_Low_Medium | F2d_High_Medium | UNUSED | UNUSED | UNUSED | UNUSED |
| F3 | Multiple Horns Fancy (5) | M | F3a_High_Low_Long | F3b_Low_High_Long | F3c_High_Low_Low_High | F3d_Fancy_Multi_Low | F3e_Fancy_Multi_High | UNUSED | UNUSED | UNUSED |
| F4 | Brake | M | | | | | | | | |
| F5 | Notch up | M | | | | | | | | |
| F6 | Notch Down | M | | | | | | | | |
| F7 | Return to Idle | M | | | | | | | | |
| F8 | Thrash | T | | | | | | | | |
| F9 | Diesel Cold Start override operation of F1, until disabled. | T | | | | | | | | |
| F10 | Compressor (Manual) | T | | | | | | | | |
| F11 | Spirax Valve | T | | | | | | | | |
| F12 | Fan | T | | | | | | | | |
| F13 | AWS Warning System Test | M | | | | | | | | |
| F14 | Flange Squeal | T | | | | | | | | |
| F15 | Air Release | M | | | | | | | | |
| F16 | Cab Door | M | | | | | | | | |
| F17 | AWS Warning Siren | M | | | | | | | | |
| F18 | Primer | T | | | | | | | | |
| F19 | Guards Whistle | M | | | | | | | | |
| F20 | Police Siren + Flashing Light | T | | | | | | | | |
| F21 | Flashing Blue Light only | T | | | | | | | | |
| F22 | Aux2 | T | | | | | | | | |
| F23 | Aux 3 | T | | | | | | | | |
| F24 | Aux 4 | T | | | | | | | | |
| F25 | Shunt Mode | T | | | | | | | | |
| F26 | Creep Mode | M | | | | | | | | |
| F27 | Dynamic Brake | M | M = Momentary Action | | | | | | | |
| F28 | AFC Enable | T | T = Toggle On/Off | | | | | | | |

Please refer to the main HM7000 Series Decoder Reference Manual for further information