

## SD042 - Class 56 Diesel

F#	Spot Sound Description	Mode									
F0	Headlight/Rear Lights	T									
F1	Sound Enable/Engine Start	T									
F2	Multiple Horns	M	F2a_56_High_Low	F2b_56_Low_High	F2c_56_High_Low_Short	F2d_56_Low_High_Short	F3e_56_Low_Low_High	UNUSED	UNUSED	UNUSED	
F3	Multiple Horns Fancy	M	F3a_56_Low_High_Low	F3b_56_3_Tone	F3c_56_High_Low_High	F3d_56_High_Low_Low_High	F3e_56_Low_High_VLong	UNUSED	UNUSED	UNUSED	
F4	Brake	M									
F5	Notch up	M									
F6	Notch Down	M									
F7	Return to Idle	M									
F8	Thrash	T									
F9	Diesel Cold Start override operation of F1, until disabled.	T									
F10	Compressor (Manual)	T									
F11	Wagons Buffering	M									
F12	Spirax Valve	T									
F13	Bell	M									
F14	Flange Squeal	T									
F15	Brake Release	M									
F16	Cab Door	M									
F17	Coupling	M									
F18	Guards Whistle	M									
F19	Buffer Up	M									
F20	Cab Beep	M									
F21	<b>Aux1</b>	<b>T</b>									
F22	<b>Aux2</b>	<b>T</b>									
F23	<b>Aux 3</b>	<b>T</b>									
F24	<b>Aux 4</b>	<b>T</b>									
F25	<b>Creep Mode</b>	<b>M</b>									
F26	<b>Coupling Mode</b>	<b>M</b>									
F27	<b>Dynamic Brake</b>	<b>M</b>	<b>M = Momentary Action</b>								
F28	<b>AFC Enable</b>	<b>T</b>	<b>T = Toggle On/Off</b>								

Please refer to the main HM7000 Series Decoder Reference Manual for further information