

### SD046 - Class 66 Diesel - Coronation Edition

F#	Spot Sound Description	Mode								
<b>F0</b>	Headlight/Rear Lights	T								
<b>F1</b>	Sound Enable/Engine Start	T								
<b>F2</b>	Multiple Horns (5)	M	F2a_High_Low	F2b_Low_High	F2c_Soft_Low_Long	F2d_High_Toot	F2e_Toot_toot	UNUSED	UNUSED	UNUSED
<b>F3</b>	Multiple Horns Fancy (3)	M	F3a_Soft_Low_Medium_with_Squeak	F3b_Horn_Fancy	F3c_Multi	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED
<b>F4</b>	Brake	M								
<b>F5</b>	Notch up	M								
<b>F6</b>	Notch Down	M								
<b>F7</b>	Return to Idle	M								
<b>F8</b>	Thrash	T								
<b>F9</b>	Diesel Cold Start override operation of F1, until disabled.	T								
<b>F10</b>	Compressor (Manual)	T								
<b>F11</b>	Wipers	T								
<b>F12</b>	Spirax Valve	T								
<b>F13</b>	Brake Application	M								
<b>F14</b>	Flange Squeal	T								
<b>F15</b>	Brake Release	M								
<b>F16</b>	Door_slam	M								
<b>F17</b>	Buffering	M								
<b>F18</b>	Primer_and_Alarm	T								
<b>F19</b>	Guards_Whistle	M								
<b>F20</b>	God_Save_the_King	M								
<b>F21</b>	<b>Aux1</b>	<b>T</b>								
<b>F22</b>	<b>Aux2</b>	<b>T</b>								
<b>F23</b>	<b>Aux 3</b>	<b>T</b>								
<b>F24</b>	<b>Aux 4</b>	<b>T</b>								
<b>F25</b>	<b>Shunt Mode</b>	<b>M</b>								
<b>F26</b>	<b>Creep Mode</b>	<b>M</b>								
<b>F27</b>	<b>Dynamic Brake</b>	<b>M</b>	<b>M = Momentary Action</b>							
<b>F28</b>	<b>AFC Enable</b>	<b>T</b>	<b>T = Toggle On/Off</b>							

Please refer to the main HM7000 Series Decoder Reference Manual for further information