

SD013 - Class 37 Diesel

F#	Spot Sound Description	Mode								
F0	Headlight/Rear Lights	T								
F1	Sound Enable/Engine Start	T								
F2	Multiple Horns (4)	M	F2a_37_Low_High_Short	F2b_37_High_Low_Short	F2c_37_Low_Medium	F2d_37_High_Medium	UNUSED	UNUSED	UNUSED	UNUSED
F3	Multiple Horns Fancy (5)	M	F3a_37_High_Low_Long	F3b_37_Low_High_Long	F3c_37_High_Low_Low_High	F3d_37_Fancy_Multi_Low	F3e_37_Fancy_Multi_High	UNUSED	UNUSED	UNUSED
F4	Brake	M								
F5	Notch up	M								
F6	Notch Down	M								
F7	Return to Idle	M								
F8	Thrash	T								
F9	Diesel Cold Start override operation of F1, until disabled.	T								
F10	Compressor (Manual)	T								
F11	Spirax Valve	T								
F12	Fan	T								
F13	AWS Warning System Test	M								
F14	Flange Squeal	T								
F15	Air Release	M								
F16	Cab Door	M								
F17	AWS Warning Siren	M								
F18	Primer	T								
F19	Guards Whistle	M								
F20	Wagons Clanging	M								
F21	Aux1	T								
F22	Aux2	T								
F23	Aux 3	T								
F24	Aux 4	T								
F25	Shunt Mode	M								
F26	Creep Mode	M								
F27	Dynamic Brake	M	M = Momentary Action							
F28	AFC Enable	T	T = Toggle On/Off							

Please refer to the main HM7000 Series Decoder Reference Manual for further information