

SD044 - TT Class 43 MTU Diesel

| F# | Spot Sound Description | Mode | | | | | | | | |
|-----|---|----------|-----------------------------|------------------------|-----------------------------|-----------------------------|------------------------------|--------|--------|--------|
| F0 | Headlight/Rear Lights | T | | | | | | | | |
| F1 | Sound Enable/Engine Start | T | | | | | | | | |
| F2 | Multiple Horns | M | F2a_43m_High_Low_Short | F2a_43m_Low_High_Short | F2c_43m_Low_High_Low_Long | F2d_43m_High_High_Low_Short | F2e_43m_Low_Low_High_Low_Low | UNUSED | UNUSED | UNUSED |
| F3 | Multiple Horns Fancy | M | F3a_43m_High_Low_Long | F3b_43m_Low_High_Long | F3c_43m_High_Low_High_Vlong | F3d_43m_Low_High_Low_Vlong | UNUSED | UNUSED | UNUSED | UNUSED |
| F4 | Brake | M | | | | | | | | |
| F5 | Notch up | M | | | | | | | | |
| F6 | Notch Down | M | | | | | | | | |
| F7 | Return to Idle | M | | | | | | | | |
| F8 | Thrash | T | | | | | | | | |
| F9 | Diesel Cold Start override operation of F1, until disabled. | T | | | | | | | | |
| F10 | Compressor (Manual) | T | | | | | | | | |
| F11 | Windscreen Wipers | T | | | | | | | | |
| F12 | Roof Fan (Manual Operation) | T | | | | | | | | |
| F13 | Guard to Driver Buzzer | M | | | | | | | | |
| F14 | Flange Squeal | T | | | | | | | | |
| F15 | Cab Door Shut | M | | | | | | | | |
| F16 | Primer | T | | | | | | | | |
| F17 | Firebell Test | M | | | | | | | | |
| F18 | Guards Whistle | M | | | | | | | | |
| F19 | Automatic Warning System Test | M | | | | | | | | |
| F20 | Drivers Safety Beeper | M | | | | | | | | |
| F21 | *Cab Light | T | | | | | | | | |
| F22 | Aux2 | T | | | | | | | | |
| F23 | Aux 3 | T | | | | | | | | |
| F24 | Aux 4 | T | | | | | | | | |
| F25 | Shunt Mode | M | | | | | | | | |
| F26 | Creep Mode | M | | | | | | | | |
| F27 | Dynamic Brake | M | M = Momentary Action | | | | | | | |
| F28 | AFC Enable | T | T = Toggle On/Off | | | | | | | |

*NOTE - F21 Cab Light only works when the loco is stationary. It will automatically switch off when in motion.

Please refer to the main HM7000 Series Decoder Reference Manual for further information