

### SD004 - Class 43 MTU Diesel

F#	Spot Sound Description	Mode								
F0	Headlight/Rear Lights	T								
F1	Sound Enable/Engine Start	T								
F2	Multiple Horns	M	F2a_43m_High_Low_Short	F2a_43m_Low_High_Short	F2c_43m_Low_High_Low_Long	F2d_43m_High_High_Low_Short	F2e_43m_Low_Low_High_Low_Low	UNUSED	UNUSED	UNUSED
F3	Multiple Horns Fancy	M	F3a_43m_High_Low_Long	F3b_43m_Low_High_Long	F3c_43m_High_Low_High_Vlong	F3d_43m_Low_High_Low_Vlong	UNUSED	UNUSED	UNUSED	UNUSED
F4	Brake	M								
F5	Notch up	M								
F6	Notch Down	M								
F7	Return to Idle	M								
F8	Thrash	T								
F9	Diesel Cold Start override operation of F1, until disabled.	T								
F10	Compressor (Manual)	T								
F11	Windscreen Wipers	T								
F12	Roof Fan (Auto Operation)	T								
F13	Guard to Driver Buzzer	M								
F14	Flange Squeal	T								
F15	Cab Door Shut	M								
F16	Primer	T								
F17	Firebell Test	M								
F18	Guards Whistle	M								
F19	Automatic Warning System Test	M								
F20	Drivers Safety Beeper	M								
F21	<b>Aux1</b>	<b>T</b>								
F22	<b>Aux2</b>	<b>T</b>								
F23	<b>Aux 3</b>	<b>T</b>								
F24	<b>Aux 4</b>	<b>T</b>								
F25	<b>Creep Mode</b>	<b>M</b>								
F26	<b>Coupling Mode</b>	<b>M</b>								
F27	<b>Dynamic Brake</b>	<b>M</b>	<b>M = Momentary Action</b>							
F28	<b>AFC Enable</b>	<b>T</b>	<b>T = Toggle On/Off</b>							

Please refer to the main HM7000 Series Decoder Reference Manual for further information