

## SD018 - Class 31 Diesel

F#	Spot Sound Description	Mode								
F0	Headlight/Rear Lights	T								
F1	Sound Enable/Engine Start	T								
F2	Multiple Horns	M	F2a_31_Horn_Low	F2b_31_Horn_High	F2c_31_Horn_High_High	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED
F3	Multiple Horns Fancy	M	F3a_31_Horn_Low_High_Low	F3b_31_Horn_High_Low_High	F3c_31_Horn_High_Low	F3d_31_Low_High	F3e_31_High_Low_High_Distant	UNUSED	UNUSED	UNUSED
F4	Brake	M								
F5	Notch up	M								
F6	Notch Down	M								
F7	Return to Idle	M								
F8	Thrash	T								
F9	Diesel Cold Start override operation of F1, until disabled.	T								
F10	Compressor (Manual)	T								
F11	Fan	T								
F12	Spirax Valve	T								
F13	Carriage Brake Squeal	M								
F14	Flange Squeal	T								
F15	Brake Release	M								
F16	Cab Door	M								
F17	Buffering Up	M								
F18	Primer	T								
F19	Guards Whistle	M								
F20	Wagons Clanging	M								
F21	<b>Aux1</b>	<b>T</b>								
F22	<b>Aux2</b>	<b>T</b>								
F23	<b>Aux 3</b>	<b>T</b>								
F24	<b>Aux 4</b>	<b>T</b>								
F25	<b>Creep Mode</b>	<b>M</b>								
F26	<b>Coupling Mode</b>	<b>M</b>								
F27	<b>Dynamic Brake</b>	<b>M</b>	<b>M = Momentary Action</b>							
F28	<b>AFC Enable</b>	<b>T</b>	<b>T = Toggle On/Off</b>							

Please refer to the main HM7000 Series Decoder Reference Manual for further information