

## SD006 - Class 73 Diesel / Electric

F#	Spot Sound Description	Mode								
<b>F0</b>	Headlight/Rear Lights	T								
<b>F1</b>	Sound Enable/Engine Start	T								
<b>F2</b>	Multiple Horns (4)	M	F2a_2_Short Bursts	F2b_Hi_Hi_Lo	F2c_Lo_Hi_Hi	F2d_Short Burst	UNUSED	UNUSED	UNUSED	UNUSED
<b>F3</b>	Multiple Horns Fancy (2)	M	F3a_Multiple_Fun_1	F3b_Multiple_Fun_2	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED
<b>F4</b>	Brake	M								
<b>F5</b>	Engine mode select / transition (Diesel Default)	T								
<b>F6</b>	Ignition	T								
<b>F7</b>	General Sounds just before moving off...	M								
<b>F8</b>	Air Release	M								
<b>F9</b>	Diesel Cold Start override operation of F1, until disabled.	T								
<b>F10</b>	Compressor (Manual)	T								
<b>F11</b>	Flange Squeal	T								
<b>F12</b>	Passing with Electrical Arcing	M								
<b>F13</b>	Carriages Passing	T								
<b>F14</b>	Moving @ 20 mph over points with Warning Bell	M								
<b>F15</b>	Moving @ 20 mph over points	T								
<b>F16</b>	Cab Warning Bell	M								
<b>F17</b>	General Station Sounds	T								
<b>F18</b>	Coupling	M								
<b>F19</b>	Sound Guards Whistle	M								
<b>F20</b>	Wagons Clanging	T								
<b>F21</b>	<b>Aux1</b>	<b>T</b>								
<b>F22</b>	<b>Aux2</b>	<b>T</b>								
<b>F23</b>	<b>Aux 3</b>	<b>T</b>								
<b>F24</b>	<b>Aux 4</b>	<b>T</b>								
<b>F25</b>	<b>Creep Mode</b>	<b>M</b>								
<b>F26</b>	<b>Coupling Mode</b>	<b>M</b>								
<b>F27</b>	<b>Dynamic Brake</b>	<b>M</b>	<b>M = Momentary Action</b>							
<b>F28</b>	<b>AFC Enable</b>	<b>T</b>	<b>T = Toggle On/Off</b>							

Please refer to the main HM7000 Series Decoder Reference Manual for further information