

SD009 - Class 08 Diesel

F#	Spot Sound Description	Mode								
F0	Headlight/Rear Lights	T								
F1	Sound Enable/Engine Start	T								
F2	Multiple Horns	M	F2a_Horn_Long	F2b_Horn_2_Bursts	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED
F3	Multiple Whistles	M	F3a_Long Whistle	F3b_Whistle_2_Bursts	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED	UNUSED
F4	Brake	M								
F5	Notch up	M								
F6	Notch Down	M								
F7	Return to Idle	M								
F8	Thrash	T								
F9	Diesel Cold Start override operation of F1, until disabled.	T								
F10	Compressor (Manual)	T								
F11	Reverser	M								
F12	Spirax Valve	T								
F13	Air Dump	M								
F14	Flange Squeal	T								
F15	Air Release	M								
F16	Detonators	M								
F17	Coupling	M								
F18	Primer	T								
F19	Exhauster	T								
F20	Hand Brake	M								
F21	Aux1	T								
F22	Aux2	T								
F23	Aux 3	T								
F24	Aux 4	T								
F25	Creep Mode	M								
F26	Coupling Mode	M								
F27	Dynamic Brake	M	M = Momentary Action							
F28	AFC Enable	T	T = Toggle On/Off							

Please refer to the main HM7000 Series Decoder Reference Manual for further information