

SD043 - Class 47 Diesel

F#	Spot Sound Description	Mode									
F0	Headlight/Rear Lights	T									
F1	Sound Enable/Engine Start	T									
F2	Multiple Horns (6)	M	F2a_47_Low_High_1	F2b_47_High_Low_1	F2c_47_Low_1	F2d_47_High_1	F2e_47_Low_High_Low_1	F2f_47_High_Low_High_1	UNUSED	UNUSED	
F3	Multiple Horns Alternate (4)	M	F3a_47_Low_High_2	F3b_47_High_Low_2	F3c_47_Low_2	F3d_47_High_2	UNUSED	UNUSED	UNUSED	UNUSED	
F4	Brake	M									
F5	Notch up	M									
F6	Notch Down	M									
F7	Return to Idle	M									
F8	Thrash	T									
F9	Diesel Cold Start override operation of F1, until disabled.	T									
F10	Compressor (Manual)	T									
F11	Spirax Valve	T									
F12	Cooling Fan	T									
F13	Carriage Brake Squeal	M									
F14	Flange Squeal	T									
F15	Triple Pump	T									
F16	Door Slam	M									
F17	Buffer Up	M									
F18	Coupling	M									
F19	Sound Guards Whistle	M									
F20	Wagons Clanging	M									
F21	Aux1	T									
F22	Aux2	T									
F23	Aux 3	T									
F24	Aux 4	T									
F25	Shunt Mode	M									
F26	Creep Mode	M									
F27	Dynamic Brake	M	M = Momentary Action								
F28	AFC Enable	T	T = Toggle On/Off								

Please refer to the main HM7000 Series Decoder Reference Manual for further information