



8

A#14

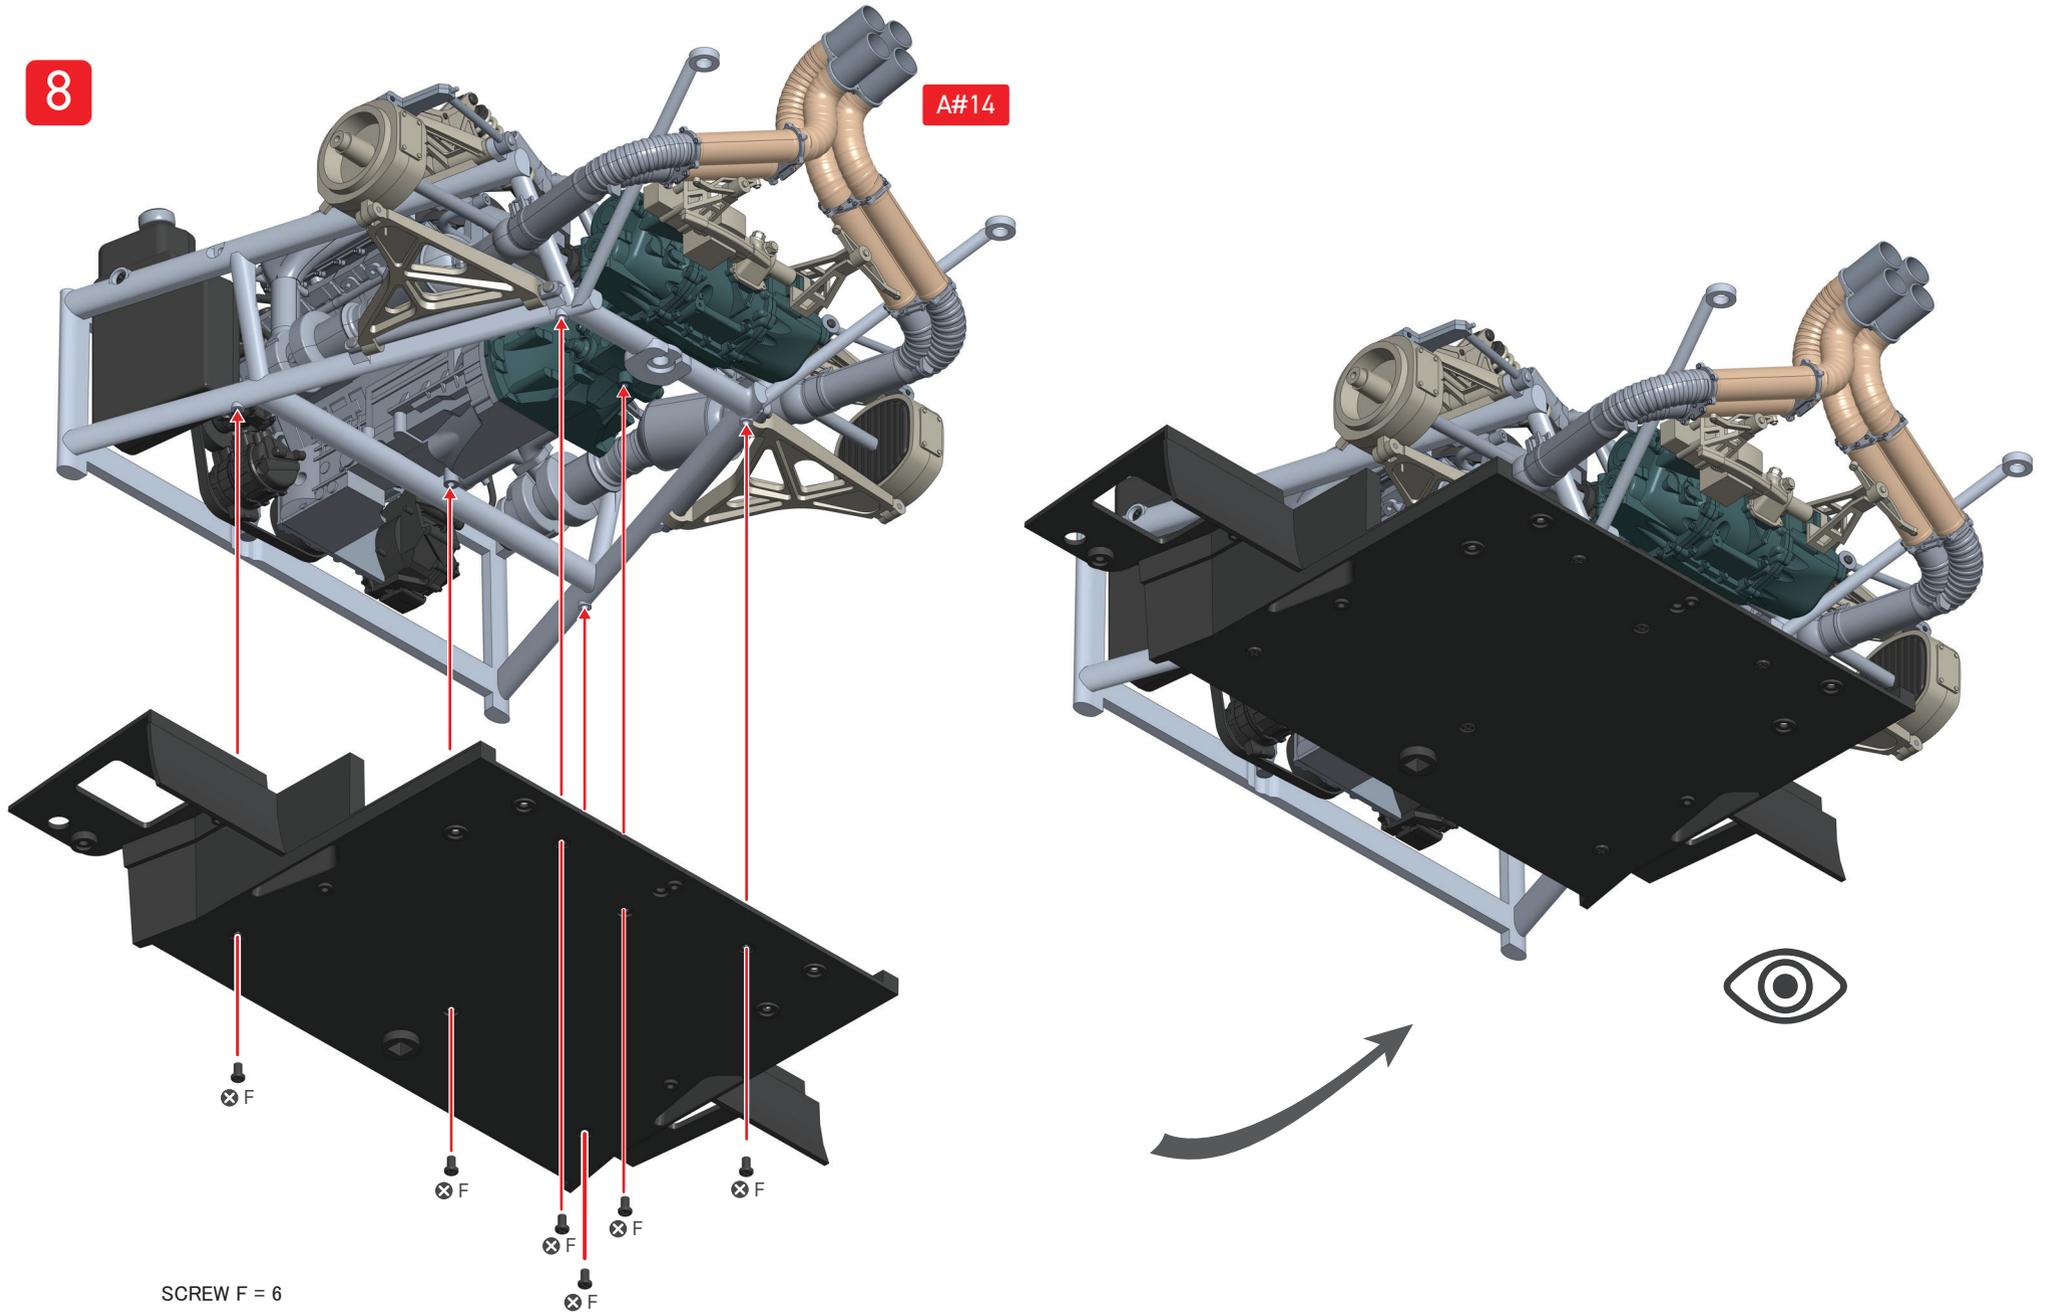



SCREW F = 6

A#14

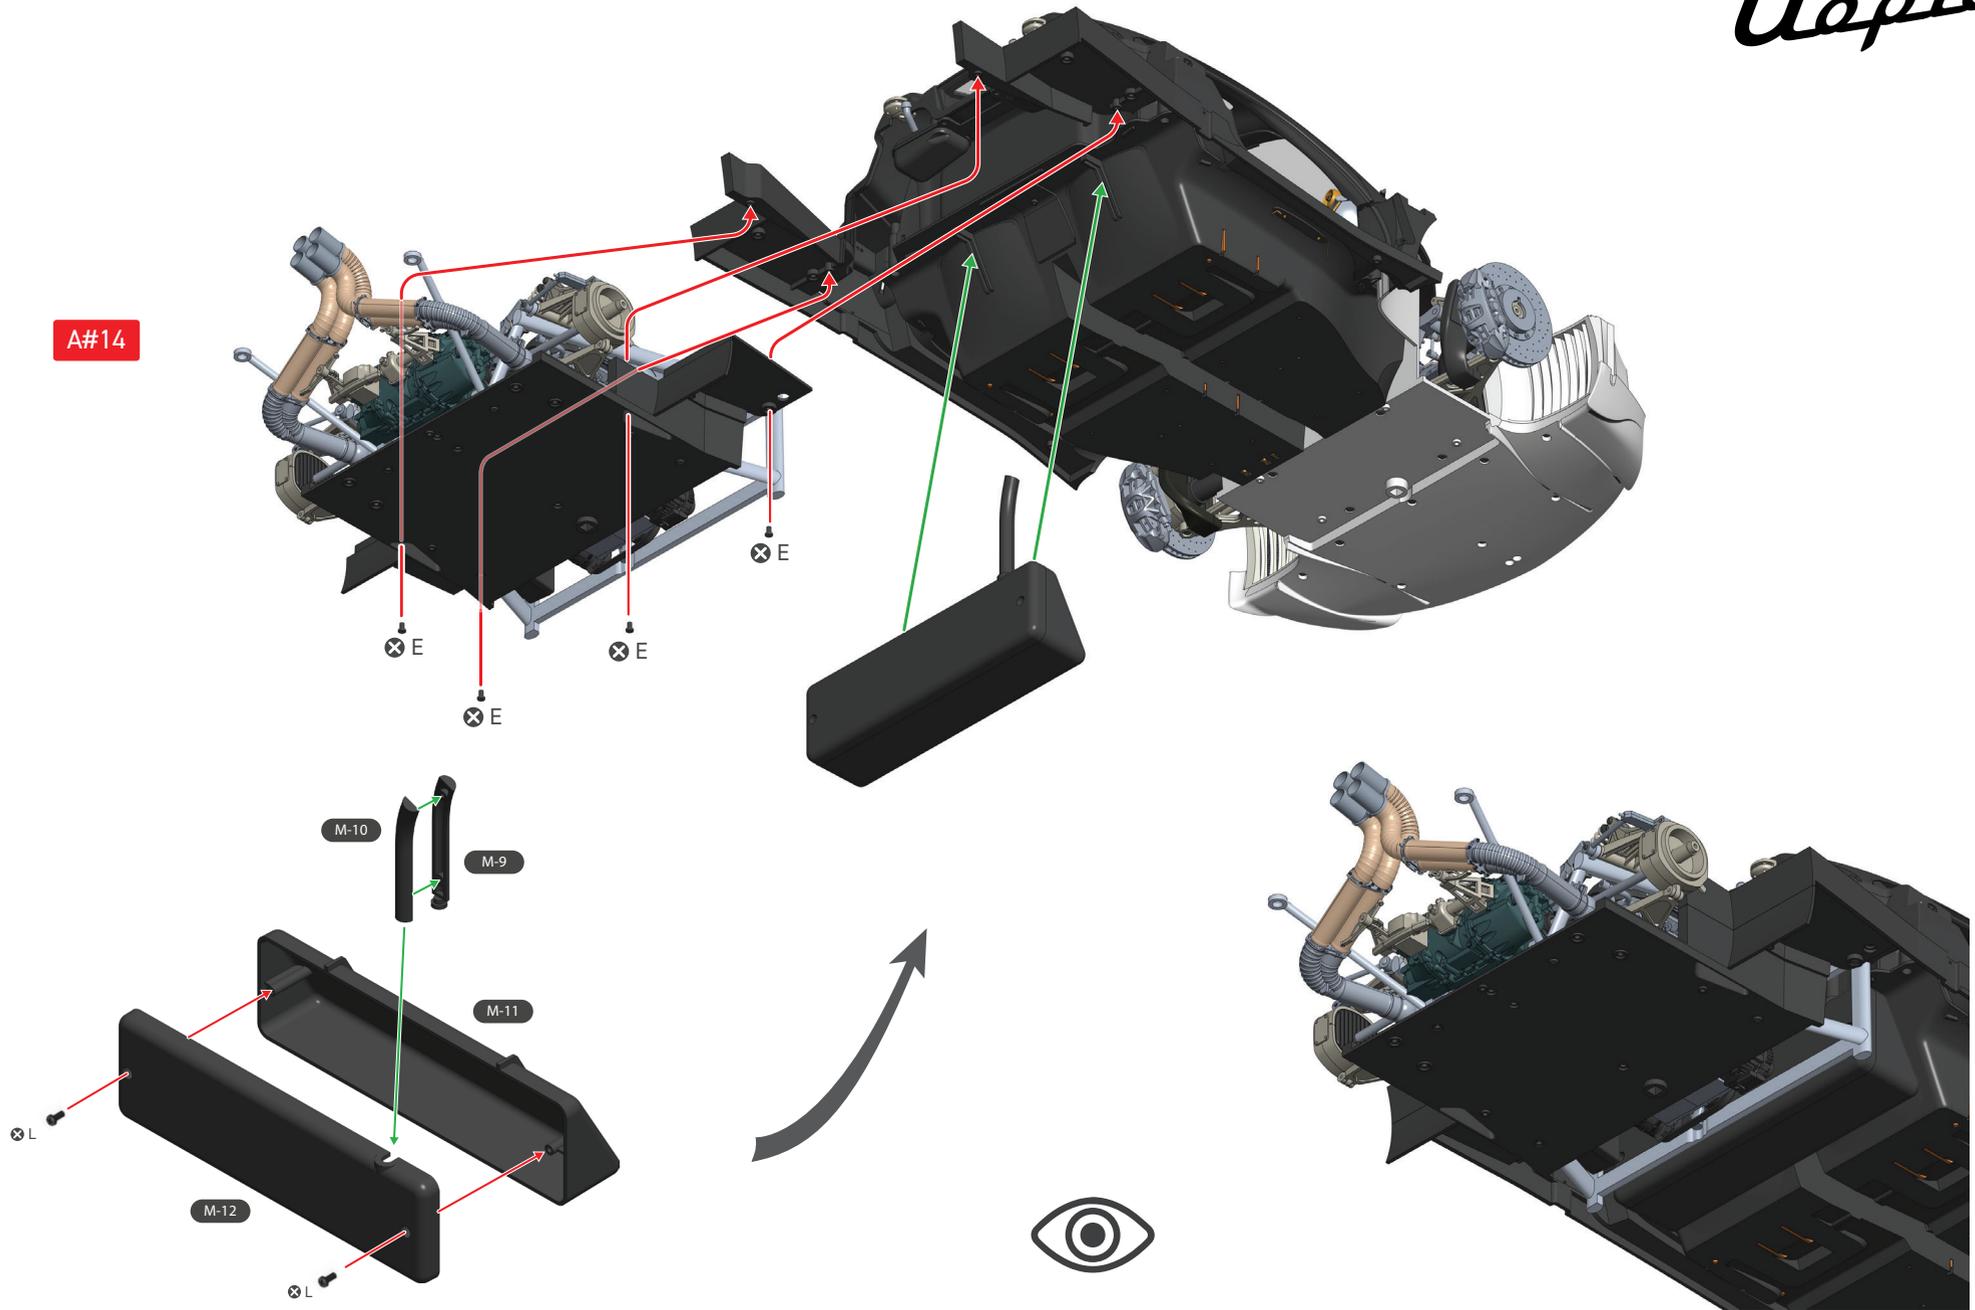




SCREW E = 4  
SCREW L = 2

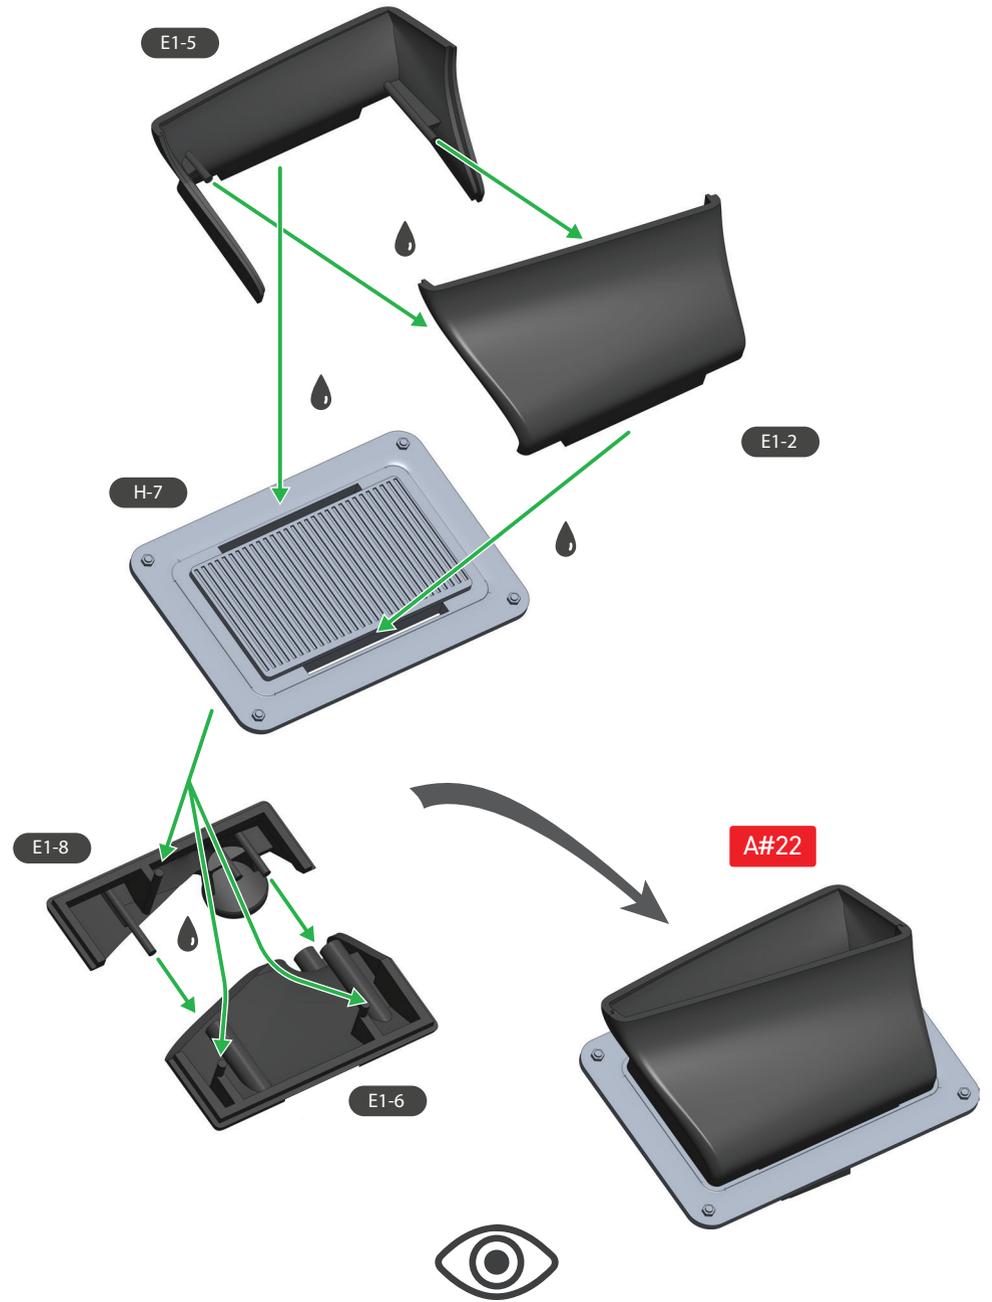

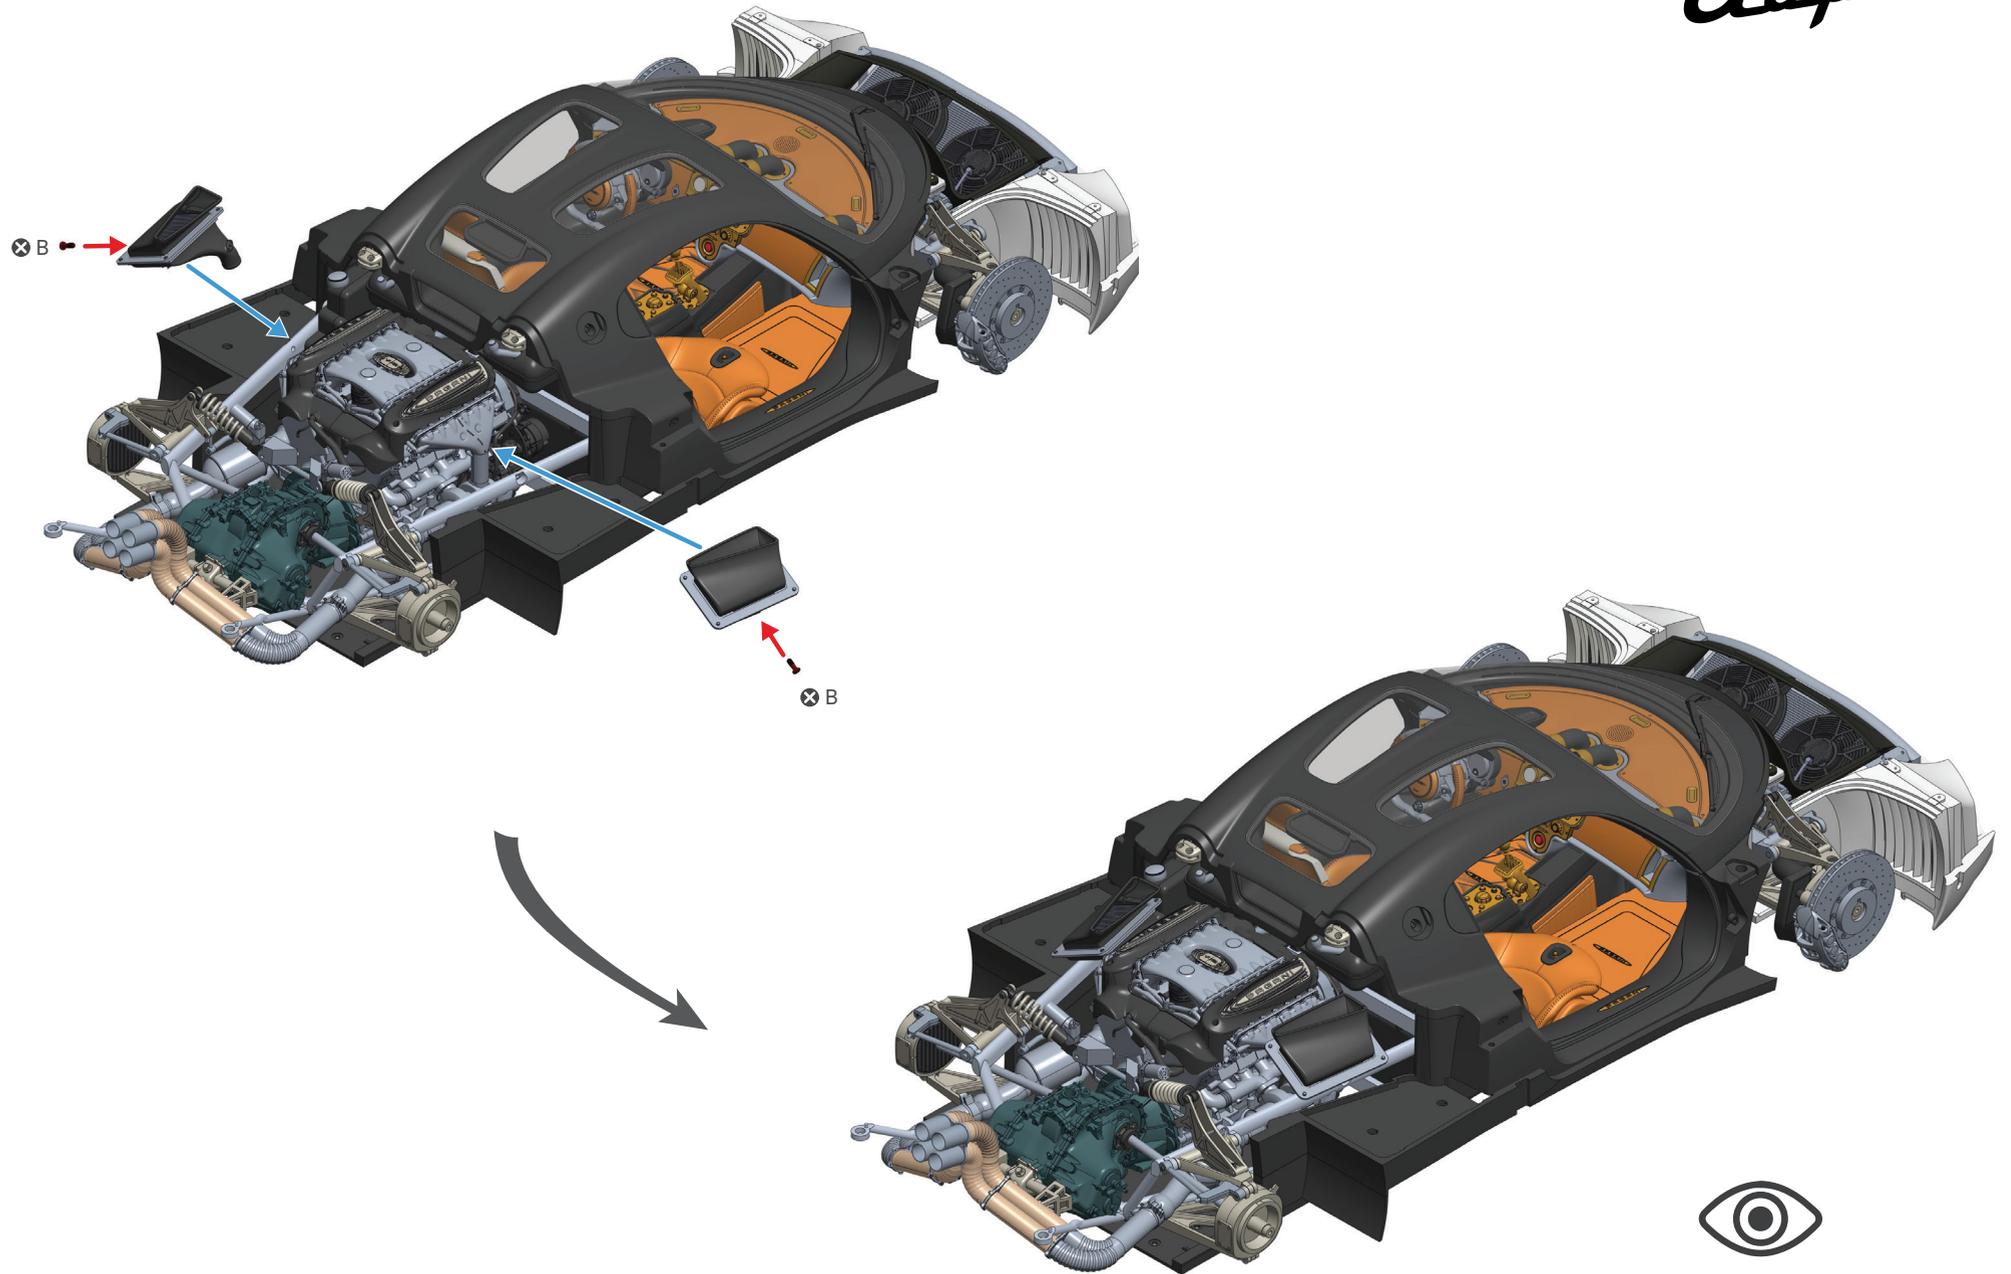


SCREW B = 2

9

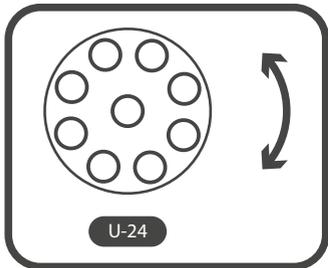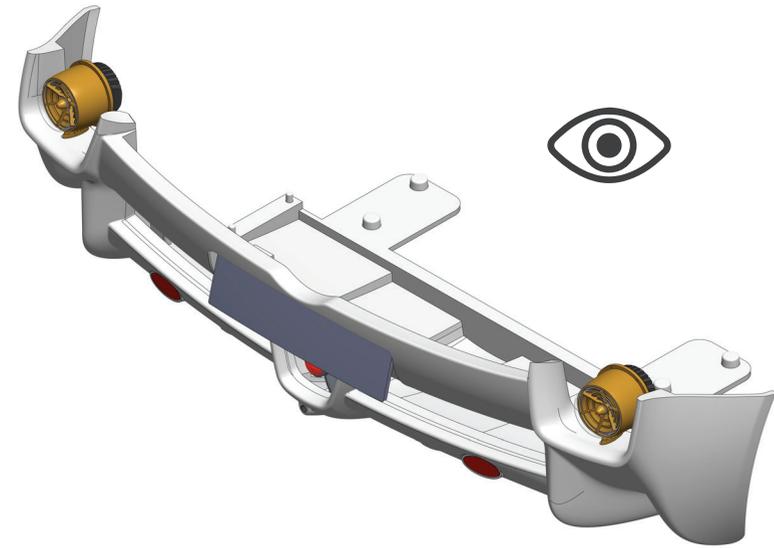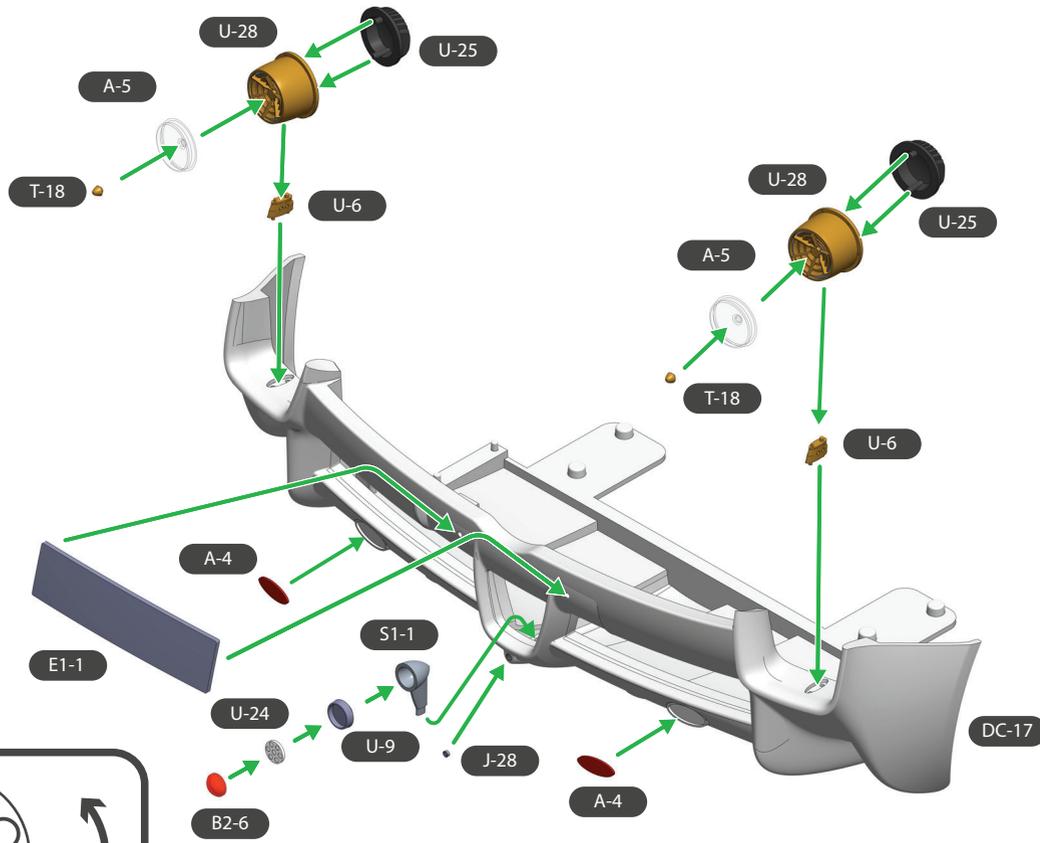

U-24 is directional, make sure to glue in the correct position.

A#21

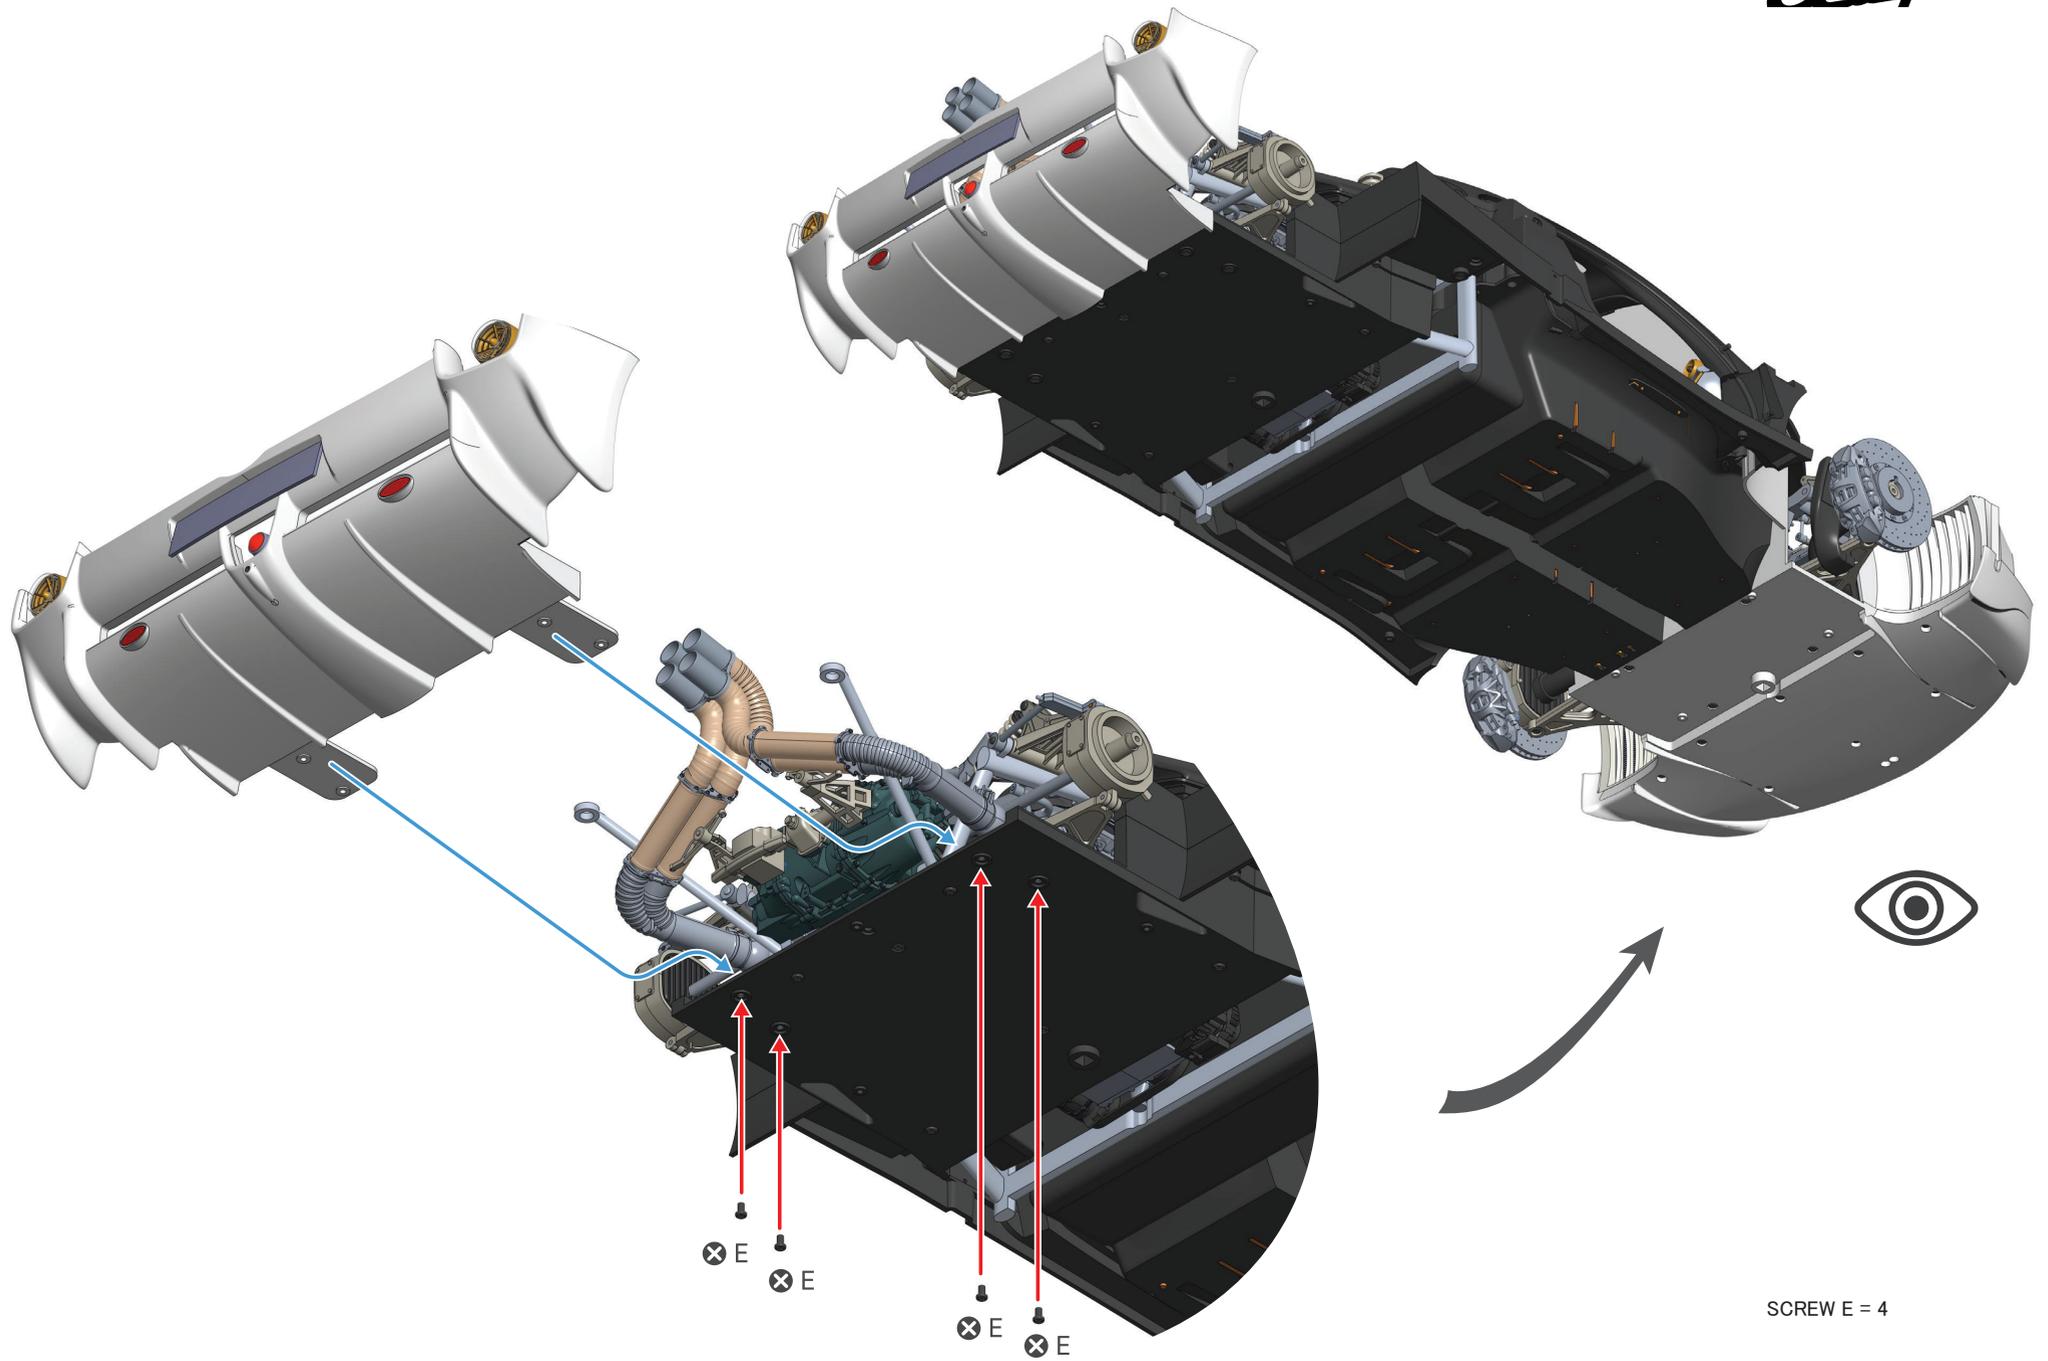

SCREW E = 4


**10**

Be careful to bend MB parts  
in the correct orientation as  
these are fragile.






Be careful to bend MB parts  
in the correct orientation as  
these are fragile.

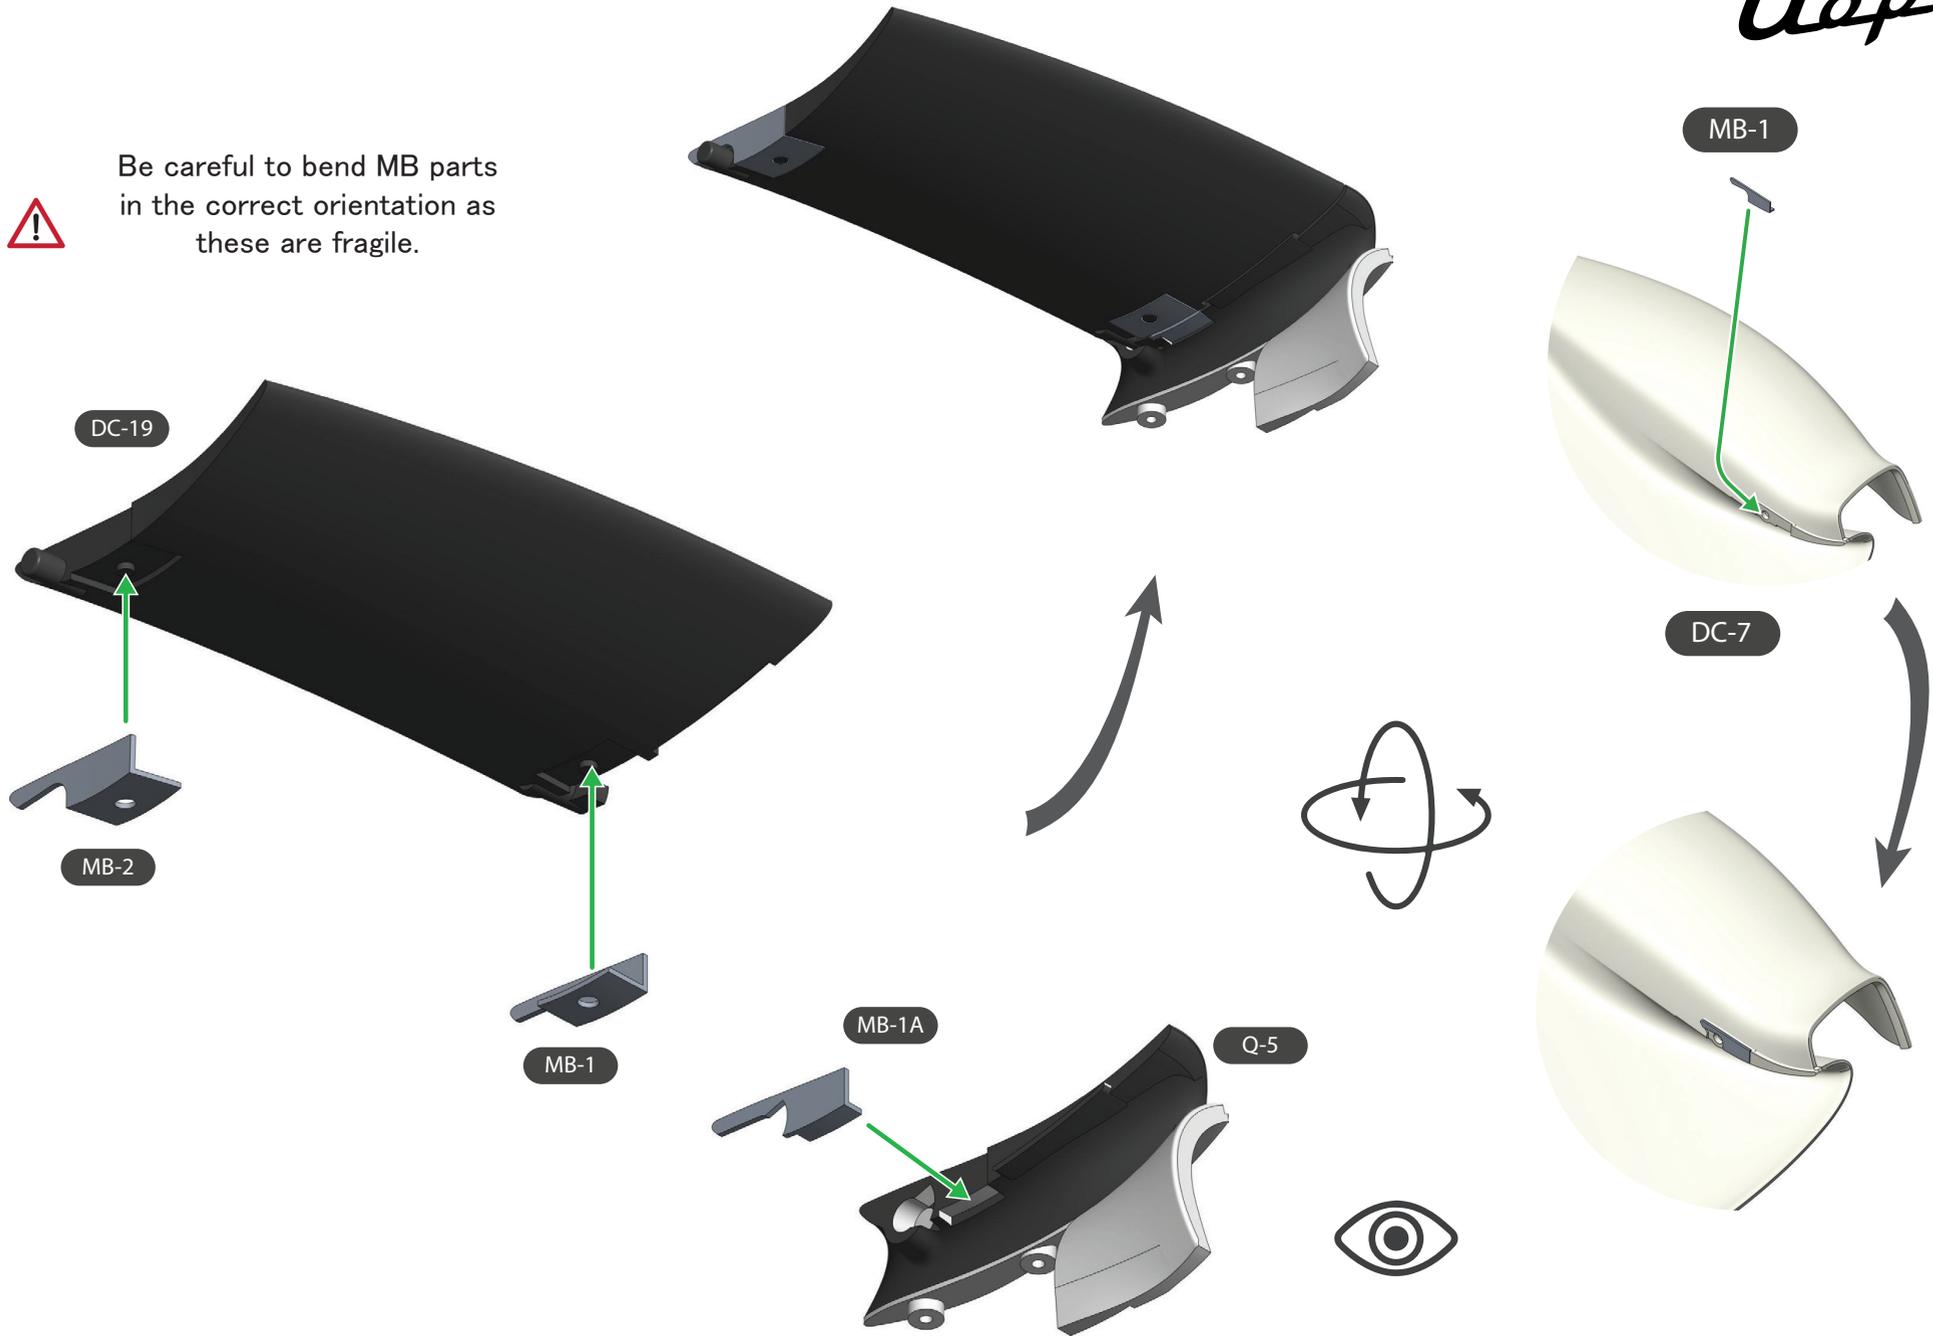


A#23

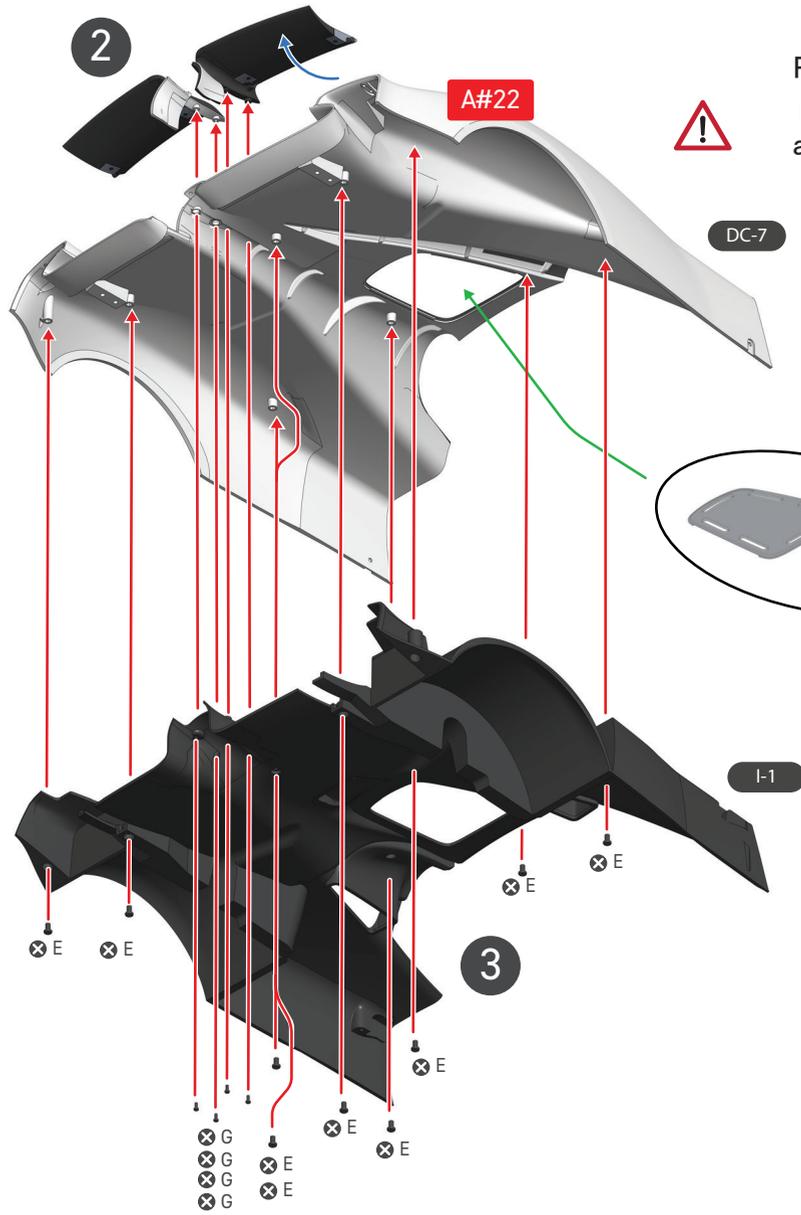

⚠

Rear wings can be fitted by positioning them vertically and slotting the metal body section first.

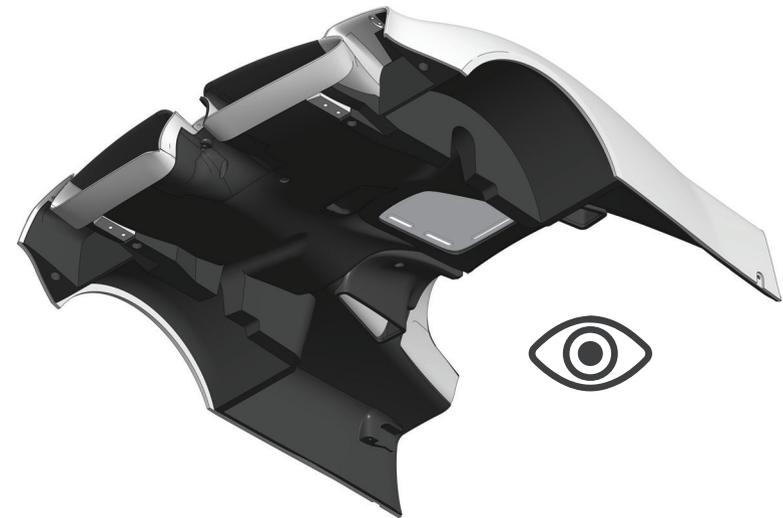

SCREW E = 9  
SCREW G = 4